

POWER

Press  to turn on or off your timer.

SETUP

Press  Screen will display:

MODE
TIME & DATE
SCHEDULE
MENU

MODE

Press **MODE** button to enter the MODE selection.

Tick **AUTO** or **MANUAL** and then press  button.

The main screen will display **AUTO** or  accordingly.

In manual mode, to select **ON** or **OFF**, press  or .

TIME & DATE

Press **TIME & DATE** button first.

Touch the area you want to adjust,

Press  or  to adjust; Press  to store.

SCHEDULE

Press **SCHEDULE**.

Press **VIEW MY SCHEDULE** to go over the schedule

Default Settings

	MONDAY - FRIDAY		SATURDAY - SUNDAY	
PROGRAM	START TIME	SETPOINT	START TIME	SETPOINT
P1	07.00	ON	07.00	ON
P2	09.30	OFF	09.30	OFF
P3	16.30	ON	16.30	ON
P4	22.30	OFF	22.30	OFF

Press **EDIT MY SCHEDULE** to change the schedule

First, select the day or days you want to program.

Press **Weekdays** to select Monday to Friday;

Press **Weekends** to select Saturday and Sunday;

Press **Select All** to select Monday to Sunday;

Press **Next** to edit the start time and **ON / OFF** status for each program.

MENU

Press **MENU**;

The following menu will be displayed.

Press  or  to switch among pages.

Press each menu to enter into the setting options.

Press  to return to **SETUP**; Press  to store the settings. Press  to return to the main screen.

1	Screen direction
2	Backlight brightness
3	Child lock
4	Clock format


5	Factory settings
6	Clean screen

INSTALLATION AND WIRING


Carefully separate the front half of the timer from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the timer. Carefully unplug the cable connector which is plugged into the front half of the timer. Place the timer front half somewhere safe. Follow the wiring diagram to connect the appliance (i.e heated towel rail, or lights) and electrical supply to the appropriate terminals. Screw the thermostat back plate on to the flush box.

To ensure the numerical display is correctly orientated during installation, the locating clip tabs must be positioned appropriately relative to the mounting orientation. For vertical mounting, ensure the locating clip / tabs are positioned at the base of the unit. For horizontal mounting, ensure the locating clip / tabs are positioned on the right-hand side when facing the front of the unit. Re-connect the timer cable and clip the two halves together.


DIMENSIONS

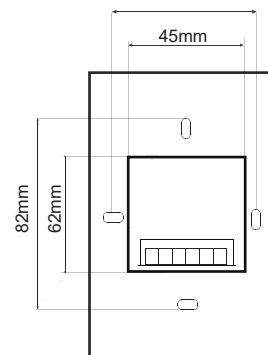

WIRING DIAGRAM

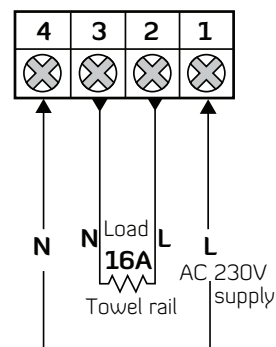

Programmable Timer UTSW-TIM

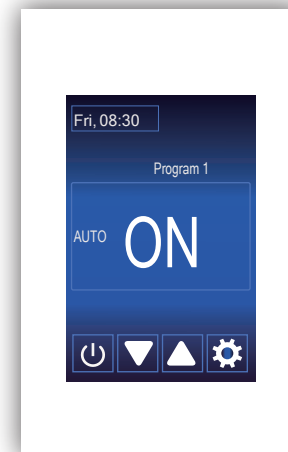

-  Large colour touch screen
-  Simple programming
-  5+2 / 7 day schedules
-  User-friendly menu
-  Vertical / horizontal models
-  Ultra slim profile